

Rihn Aircraft Corp.

DR-107- One Design

Drawing List

1	DR7-1-000	General Arrangement
2	DR7-1-001	Paint Scheme
3	DR7-1-110	Fuselage Structure
4	DR7-1-111	Basic Fuselage Structure
5	DR7-1-112	Basic Fuselage Structure
6	DR7-1-113	Basic Fuselage Structure (Bill of Material)
7	DR7-1-114	Firewall
8	DR7-1-115(1)	Fuselage Side Panel
9	DR7-1-115(2)	Fuselage Side Panel (Front)
10	DR7-1-116	Fuel Tank Fairing
11	DR7-1-117	Roll Over Safety Bar
12	DR7-1-118(1)	Cockpit Coming
13	DR7-1-118(2)	Belly Pan (Rear)
14	DR7-1-118(3)	Belly Pan (Forward)
15	DR7-1-119	Former, Side and Bottom
16	DR7-1-120	LDG Mounts, Wing Mounts
17	DR7-1-121(1)	Fuselage Standoffs, Fuel tank Mount
18	DR7-1-121(2)	Fuselage Stringer Standoffs
19	DR7-1-122	Cockpit, Seat & Turtledeck
20	DR7-1-123	Fuselage Stringers
21	DR7-1-125	Fin & Rudder
22	DR7-1-126(1)	Tail Cone Fairing
23	DR7-1-126(2)	Tail Cone Fairing
24	DR7-1-126(3)	Tail Cone Fairing
25	DR7-1-127	Cowl Assembly
26	DR7-1-128	Sliding Canopy Assembly
27	DR7-1-130	Fuel system
28	DR7-1-131	Fuel Tank Ends-Flat Patt
29	DR7-1-144	Pitot Static System
30	DR7-1-145	Canopy Loft
31	DR7-1-146	Instrument Panel
32	DR7-1-147	Former, Fuselage Turtle Deck
33	DR7-1-148	Turtle Deck Assembly
34	DR7-1-149	Wing Root Fairings
35	DR7-1-150(1)	Longitudinal Control System
36	DR7-1-150(2)	Longitudinal Control System
37	DR7-1-151	Directional Control
38	DR7-1-152	Tailwheel Spring & Tailwheel
39	DR7-1-160	Horizontal Tail Structure

40	DR7-1-161	Horizontal Tail Installation Details
41	DR7-1-162	Tail Brace wires-Lugs and Installation
42	DR7-1-201	Engine Mount
43	DR7-1-301	Basic Wing Structure –Douglas Fir Spar
44	DR7-1-302	Wing Spanwise Members –Douglas Fir Spar
45	DR7-1-303	Wing Skin
46	DR7-1-304	Wing Ribs- Fir Spar (W.S 12.5, 15 & 24)
47	DR7-1-305	Wing Ribs- Fir Spar (W.S 36 & 48)
48	DR7-1-306	Wing Ribs- Fir Spar (W.S 60 & 72)
49	DR7-1-307	Wing Ribs- Fir Spar (W.S 84 & 96)
50	DR7-1-308	Wing Tip Rib
51	DR7-1-309	Aileron Mount Controls Wing Attach
52	DR7-1-310	Aileron Assembly
53	DR7-1-311	Wing Tip
54	DR7-1-312	Aileron Spades
55	DR7-1-313(1)	Wing Installation
56	DR7-1-313(2)	Wing Installation
57	DR7-1-901	Basic Wing Structure –Spruce Spar
58	DR7-1-902	Wing Spanwise Members –Spruce Spar
59	DR7-1-904	Wing Ribs- Spruce Spar (W.S 12.5, 15 & 24)
60	DR7-1-905	Wing Ribs- Spruce Spar (W.S 36 & 48)
61	DR7-1-906	Wing Ribs- Spruce Spar (W.S 60 & 72)
62	DR7-1-907	Wing Ribs- Spruce Spar (W.S 84 & 96)